
Using termination at BR6000




Termination resistors are **in use**.

RS485–bus–structure:

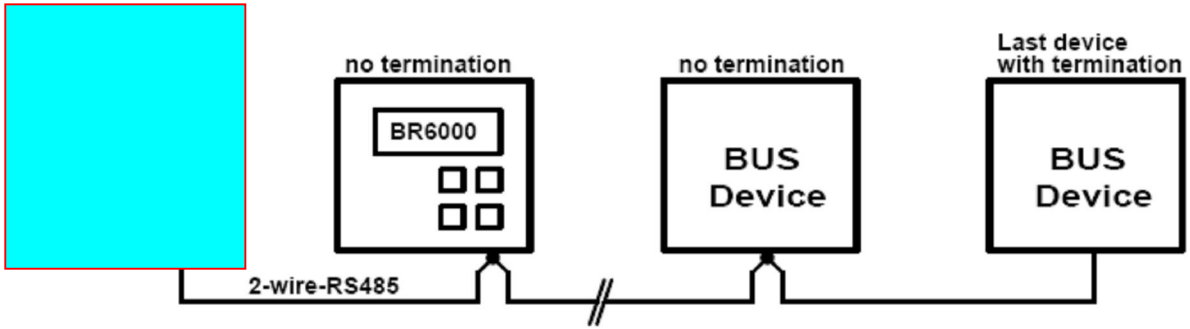


Set the termination resistor if the device is the first or last one at the bus. If there are only 2 devices at the bus this applies, too.

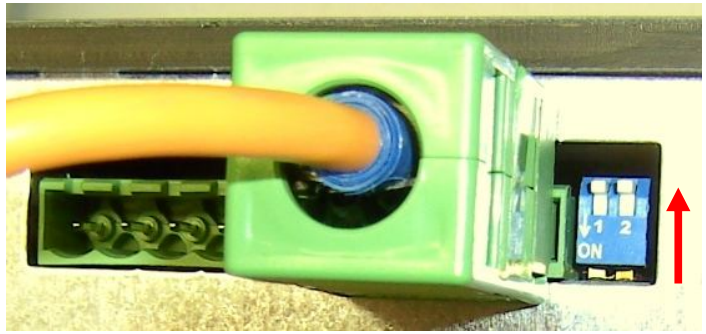

Termination resistors are **not** in use.

RS485–bus–structure:

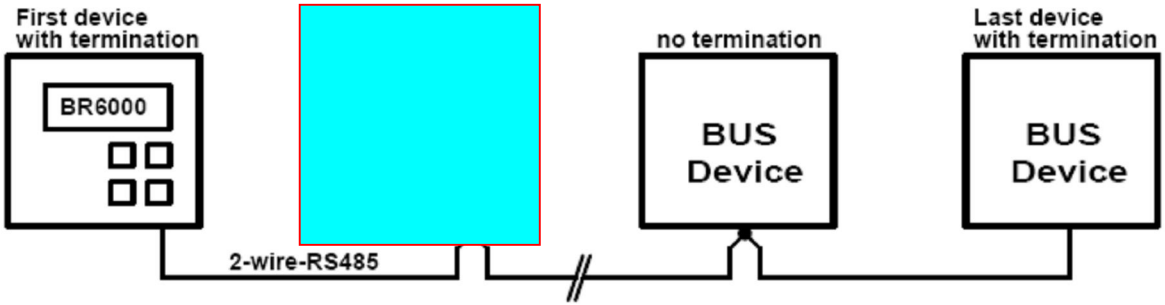

Do not set the termination resistor if the device is between two bus members.